LOGICOM

Photo representative only

# QUICK START GUIDE
# Le Kay 283
## Smart Featurephone GPS/WIFI/BT/GSM/3G

**You can find our latest user manual on our website [http://www.logicom-europe.com](http://www.logicom-europe.com) in PDF format**

# Trademarks

KaiOS, KaiStore, the KaiOS logo and other marks are trademarks of KaiOS Technologies Inc.
Bluetooth® est une marque déposée de Bluetooth SIG, Inc.
Adobe Flash Player Copyright(C) 1996-2011 Adobe Systems Incorporated. All rights reserved. Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO
(i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR
(ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A
VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://MPEGLA.COM
Facebook, the Facebook logo, and the F logo are trademarks or registered trademarks of Facebook, Inc.
Foursquare is the registered trademark of Foursquare Labs, Inc.
This software is partially based on the work of the Independent JPEG Group.
The MPEG Layer-3 audio encoding technology and patents are licensed by Fraunhofer IIS and Thomson.
THIS PRODUCT IS LICENSED UNDER THE MPEG4 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO
(i) ENCODE VIDEO IN COMPLIANCE WITH THE MPEG4 STANDARD ("MPEG4 VIDEO") AND/OR
(ii) DECODE MPEG4 VIDEOS THAT WAS ENCODED BY A CONSUMER ENGAGED
IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE MPEG4

VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://MPEGLA.COM

SD, SDHC, microSD and the microSDHC logos are trademarks of SD-3C, LLC.

The Twitter name, logo, Twitter T, Tweet, and Twitter bird are trademarks of Twitter, Inc. in the United States and other countries.

THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE
PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO
(i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR
(ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO.
NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C.
SEE HTTP://WWW.MPEGLA.COM

Wi-Fi, the Wi-Fi CERTIFIED logo, WPA, WPA2 and Wi-Fi Protected Setup are trademarks or registered trademarks of Wi-Fi Alliance.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

All other names of systems, products and services are trademarks or registered trademarks of their respective owners. The symbols ((TM)) or (R) are not used in this guide.

# Got everything?

- 1 x Telephone
- 1 x AC adapter charger – USB – (Model: TPA-97050070V01; 5V 0.7A) (SHENZHEN TIANYIN ELECTRONICS CO., LTD; 2-6 FL, BLDG 9, SANZHULI INDUSTRIAL PARK, SHUITIAN COMMUNITY, SHIYAN SUBDISTRICT, BAO'AN DISTRICT, SHENZHEN, GUANGDONG, 518108, CHINA)
- 1 x Quick start guide
- 1 x Pedestrian kit

**NOTE:** The packaging materials, such as the adhesive tape, plastic film, string and labels, are not part of this product.

**WARNING: For your safety, please do not remove the screen's protective film, located under the antistatic film (with tab). It protects your screen against slight scratches and provides optimum protection if the phone is dropped.**

*Logicom accepts no responsibility for personal injury sustained following removal of the protective film by the consumer. Note that this protective film does not increase the robustness of the product. For replacement of the protective film, please consult a specialist Telephone dealer.*

# About KaiOS

Your phone comes with the KaiOS operating system.
This new operating system opens the way to a new category of feature phones by bringing many essential applications, once only exclusive to smartphones.
Thanks to its partnerships with the most famous application publishers, KaiOS phones offer an optimal user experience. The KaiStore natively supports many third-party apps and services, and many more (WhatsApp, Facebook, Google Search, Assistant, Maps, YouTube …) !

# Installation guide

## 1. Description of the phone.

1 – Front camera
2 – Rear camera & flash
3 – Speakers
4 – Micro USB port
5 – Jack

## 2. Inserting a SIM card

Your Telephone is a mobile phone with dual SIM card, which enables you to use two lines on the same Telephone.
Your telephone has two SIM slots (SIM 1 and SIM 2).
To insert the SIM card(s):

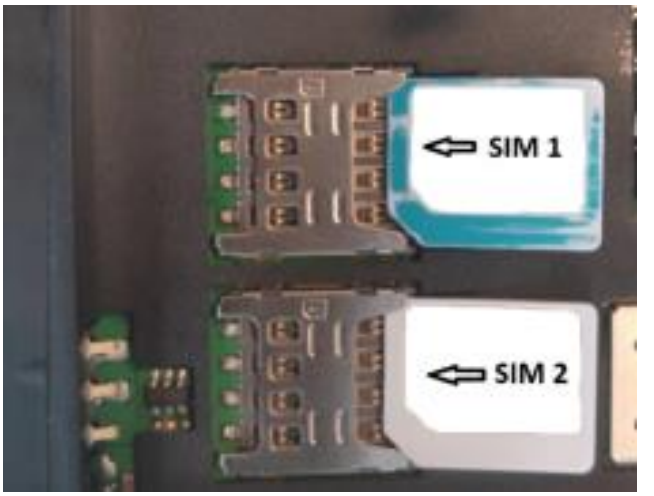


- Switch off the phone and remove the rear cover and battery.
- Insert the SIM card correctly into the relevant card slots. Observe the direction of insertion of cards, the contacts to the outside.
- SIM 1 uses a Micro-SIM card and SIM 2 uses a Micro-SIM card.

**CAUTION:** The 3G function can only be used on one SIM card.

- Then replace the SIM compartment in place.

## 3. Inserting a MicroSD

It is possible to increase the internal memory of the device with a MicroSD card. (Maximum 32GB MicroSD card).

Insert the card into the memory card reader following the steps below

- Remove the back cover from the phone, and then remove the battery.
- Push the metal clip in the direction of the arrow shown in photo (1) to raise it up
- Insert the memory card into the slot provided, with the metal contacts facing downwards, refer to photo (2)
- Close the metal clip and drag it in the direction of the arrow shown in photo (3) to lock the memory card

(1) (2) (3)

**Tip: If the memory card does not work, check that it is inserted correctly and also check the metal contact points. You can also try to format the memory card. You shouldn't have to close the metal clip with a lot of strength.**

Le Kay 283
- Please refer to the user manual before using the battery
- Veuillez consulter le mode d'emploi avant d'utiliser la batterie
WARNING

## 4. Charging the battery

***Installing the battery:***

- Remove the rear cover of your Telephone.
- Insert the battery ensuring that the image shown here is facing you.
- Replace the rear cover of the Telephone.

***CAUTION:*** Risk of explosion if battery is replaced by an incorrect type.
Model: 564462AR2000 (Li-ion – 3,7V – 2000mAh)
To replace the battery, please enquire with the after-sales service of your dealer.
Dispose of used batteries according to the instructions.
To replace the battery, please enquire with the after-sales service of your dealer.
Dispose of used batteries according to the instructions.

***Charging the battery:***

- To charge the battery, connect the USB cable (supplied) to the USB port of your Telephone and the other end to the mains adaptor (supplied). Then connect the mains adaptor to a power outlet.

- The battery charge icon illuminates during charging and indicates the charge status.
- When the battery is fully charged, you can disconnect the USB cable from the device then from the power outlet.

**IMPORTANT:**

- The Telephone is only recharged via its USB port.
- Ensure your Telephone is fully discharged before charging it for the first time.
- The battery must be charged for at least 5 to 8 hours when first charged.
- After a long period without use, It should be necessary to do many cycles of charging / discharging to obtain maximum power capacity

**Note:** You can use the device when it is being charged. In this case, the battery may take longer to charge fully.

***Safety information for charging the battery:***

- To recharge the battery, only use the mains adaptor supplied with your device. Do not use any other power supply or electrical device.
- The power outlet to which the device is connected must be near the equipment and must always be easily accessible.
- Always wait at least 5 seconds after switching off the device before restarting it. Switching the device off and then back on again immediately may damage the electrical circuits.
- Do not disassemble, open or shred the battery contents. Do not dispose of batteries in fire or water. Do not charge the battery if the room temperature exceeds 45° C. Keep the battery in a clean and dry place. Avoid leaving the battery under sunlight.
- Do not short circuit the battery. Do not keep the battery in a place where it can be shorted by other metal objects.
- Keep the battery away from children, in case of swallowed, consult a doctor immediately. In case of battery leak, take care to not allow the liquid come in contact with skin or eyes, if this case happens, wash thoroughly with water and consult a doctor.
- For all repairs or to replace the battery, consult a qualified technician.

- The lifetime of the battery depends largely on how you use it. Do not expose the battery to temperatures less than 0°C or greater than 60°C. Its performance may be altered.
- Significant electromagnetic interference or electrostatic discharge may cause malfunction or loss of data. If the device is not working properly, restart the Telephone or unplug the mains adaptor from the power outlet then plug it in again.
- Remove when it’s possible the battery when the Telephone is not used during a long period.
- Dispose of the battery and the Telephone separately. Do not pu the battery in the household waste, for frther information about recycling of the battery, contact your municipality, your local waste or the store where you purchased the product.

5. Create a **KaiOS** account

The first time you start your phone, you will be asked to create a KAIOS account.

Follow the instructions on the phone to create your account.

You will need an internet connection to perform the different steps; internet connection is optional, but it is strictly advised to use it when creating your account.

CAUTION: Forgetting or losing your KaiOS identifiers used to identify you will permanently block your phone if it is restarted.

In case of forgetting or loss, the product warranty will not take effect for such negligence. Indeed, even a "reset" cannot solve this problem.

As a precaution, write down your KaiOS account address and password below:

**ACCOUNT ADRESSE :** _____

**PASSWORD :** _____

# Getting Started

## 1. Switching the Telephone on and off

• To switch on the phone, press the button on the phone for 5 seconds.

• If the phone is switched on, press the button for 2 seconds then select "lock" to put it in standby mode. To exit standby mode, press the button for a few seconds.

• To switch off the phone, press the button for 5 seconds until a menu appears, then click on the Switch off button then confirm.

## 2. Locking / unlocking SIM cards

Your Telephone is a dual SIM Telephone. It enables you to phone using two lines from the same device.
There are two SIM card slots.

- When you start up your phone, the latter invites you to enter the PIN codes of your two SIM cards in succession. (SIM1 then SIM 2)
- The "emergency call" function enables you to call an emergency number without entering the PIN code.

CAUTION: We advise you to write the PIN codes of your SIM cards here. Logicom cannot be held responsible for the loss or forgetting of these codes.

**CODE PIN SIM 1 :** _____

**CODE PIN SIM 2 :** _____

## 3. Locking / unlocking the screen

To unlock the screen:

- Press the power key on your phone.
- Hold and drag the unlock icon to the right to unlock the device.

You can configure the screen lock by adding a password or pattern to be replicated when unlocking your Telephone.

**<u>CAUTION</u>: Forgetting your screen lock password, PIN code or pattern permanently blocks your Telephone**
**If this is forgotten or lost, the product warranty will not cover such an oversight. Even a "reset" cannot solve the problem.**
**As a precaution, take a note of your password or pattern.**

**PASSWORD: _____**

### 4. Making a call

NOTE: It is impossible to make or receive a call on the two SIM cards at the same time.
For example, if you are on a call on the SIM 1 line, those trying to contact you on SIM 2 will automatically be diverted to voicemail.

- Tap the icon on the main menu or the home screen to dial the number of your choice.
- Tap the operator icon to call with SIM 1 or SIM 2.
- Press the +/- buttons to adjust the call volume.
- When you want to end a call, press the icon .

## 5. Receiving a call

- When a call is received, slide your finger over the icon .
- When you want to end a call, press the icon .

## 6. Enable / Disable the Wi-Fi connection

**<u>NOTE</u>: To limit your exposure to electromagnetic fields we recommend you disable Wi-Fi when not in use.**

In the "Settings" application, move the cursor with the central button then click on the central button to activate or deactivate Wi-Fi. The device automatically searches for available Wi-Fi networks. Click on the network of

your choice to activate it and connect. You can also activate this function from the notifications panel. The icon is displayed on the system tray when you are connected to a wireless internet network or when wireless internet networks are detected by the device.

**NOTE: Most Wi-Fi networks are locked with a password (WEP or WPA2 PSK key). To connect to a locked Wi-Fi network, click on it and enter the password for your network in the dialogue box which is displayed on the screen.**
**The WEP or WPA2 PSK key for a Wi-Fi network is generally noted on a label located on the back of your internet modem.**
**NOTE:** Restart your Telephone if necessary.

## 7. Enable / Disable Bluetooth connection

**NOTE: To limit your exposure to electromagnetic fields we recommend you disable Bluetooth when not in use.**

In the "Settings" application, move the cursor with the central button then click on the central button to activate or deactivate Bluetooth.

## 8. Reset

If you want to reset your telephone, you can do a reset of data from the operating system KaiOS.
**CAUTION:** A reset data erase all your personal data, all contacts in your phone and the applications you have installed. That is why we recommend that you make a backup of your data before starting the procedure. However the information stored on the external memory card will not be erased.
To do a reset of the data, you have two options:

***Reset the device by setting menu :***
In Settings, press the right of the central block until you reach "Device", move the cursor to "Device information" and then move the cursor to the bottom of the screen until you reach "Reset phone." " Then click on "Reset" to confirm.

The phone will turn off. Upon restart the system will be reset.

**NOTE:** If you encounter any problems with the product, first do a system reset before returning it to after sales service.

## 9. Downloading an application

Your Telephone is supplied with on-line store, KaiStore enabling you to download applications such as utilities and games.

To access these to the store, tap the icon

**NOTE**: The availability of access to KaiStore depends on your phone operator and the country in which you are located. Access to the on-line store requires an account to be created.

**NOTE: LOGICOM shall under no conditions be responsible for the content on the on-line store. The product warranty will not cover any malfunction due to an application from on-line stores.**

### 10. Update the phone

In Settings, press the right of the central block until you reach "Device", move the cursor to "Device information" then move the cursor to the bottom of the screen until you reach "Software update ”then click on the central button. Then click "Check for update" to check if your phone has an update. If so, follow the directions on your phone to install the update. Your phone will turn off during the installation of the update and will therefore be inaccessible - please wait until the phone turns on again.

## Warning on using the phone while driving

***In France, in accordance with Article R412-6-1 of the French highway code, drivers are not permitted to use hand-held phones whilst the vehicle is moving.***

***The penalty for non-compliance with this article is a fine and point penalty on your driving licence.***

It is also forbidden to wear any system such as earphones, pedestrian kits, headsets, headphones, susceptible to limit the attention or the hearing of the drivers.

**NOTE: this legislation applies only in France. During trips abroad, please refer to the legislation in place in your country of origin before travelling**.

## Listening safety

- Before using the pedestrian kit, check that the volume is not set to maximum to prevent hearing loss.
- The high volume settings are intended for individuals with reduced hearing capacity and not for those with normal hearing.
- Do not use the pedestrian kit while driving.
- Adjust the volume so that you can hear the sounds around you.
- Listening at high volumes can damage your hearing and lead to hearing impairment (deafness, ringing ears, tinnitus and hyperacusis).

In order to prevent these risks it is recommended not to use the device at full volume; use must not exceed one hour per day.

- This product complies with the **EN62368-1:2014** standard in accordance with the order of 25 July 2013 implementing Article L. 5232-1 of the French public health code concerning portable audio players.

- Do not use pre-amplified or amplified models of headphones or earphones (i.e. with individual volume control and/or self-powered by batteries), as they do not ensure adherence to the maximum volume.

- **To prevent possible hearing damage, do not listen at high volume levels for long periods.**

# Electromagnetic waves safety information (SAR)

Your Telephone is designed to not exceed the radio wave limits recommended by the European authorities. These limits include safety margins to ensure the protection of all persons regardless of their age or health.
The SAR (specific absorption rate) of mobile phones quantifies the maximum level of exposure of the user to electromagnetic waves, for aural use. French legislation stipulates that the SAR must not exceed 2 W/kg averaged over 10g of tissue.
The value of the SAR is determined on the basis of the highest level of radio frequencies emitted during laboratory tests.
The actual value of the SAR during use of the telephone is lower than this level.
The value of the SAR of the telephone can vary according to the following factors: how far/close the phone is to a relay antenna, use of accessories and others.
The maximum SAR level of your Telephone is given in the following table:

| Position | Connectivity | SAR value |
|---|---|---|
| Head | GSM900 / DCS1800 / WCDMA900 / WCDMA2100 | **0.743 W/kg** |
| Trunk (Separation distance 0 mm) | GSM900 / DCS1800 / WCDMA900 / WCDMA2100 | **1.545 W/kg** |
| Limbs (Separation distance 0mm) | GSM900 / DCS1800 / WCDMA900 / WCDMA2100 | **1.545 W/kg** |

Trunk SAR testing has been carried out at a separation distance of 0 mm.

**This device is in accordance with the regulations regulating the exposure at radio frequencies when it is used at a minimal distance of 0 mm from the body.**
**NOTE**: The SAR value may vary, depending on national reporting and testing requirements and the network band.

**NOTE:**

- Do not use your Telephone in certain locations such as aircraft, hospitals, service stations and professional garages or while driving a vehicle. The electromagnetic waves from the Telephone can disrupt the performance of electronic devices used in these locations.
- We recommend that you switch off your phone or switch it to flight mode in these locations to avoid interference.
- If you use an electronic implant (pacemakers, insulin pumps, neurostimulators, etc.), please keep a distance of 15cm between the Telephone and your electronic implant.
- When using a pedestrian kit, pregnant women should keep the phone away from their abdomen and teenagers should keep the phone away from their lower abdomen.

***Advice to reduce the level of exposure to radiation:***

- Please use your Telephone where reception is good to reduce the quantity of radiation received (avoid using in an underground car park or when travelling (train or car)).
- A reception icon indicates the quality of reception on your phone. A 4-full display means that reception is good .
- Use of a pedestrian kit also allows the level of exposure to be reduced.
- To limit the bad consequences of the exposure to a prolonged radiation, we advise teenagers to hold the phone away from their lower abdomen, and pregnant women to hold the phone away from their belly.
- As with any radio electric product, we advise you to use your device wisely, especially when used by children and adolescents. You can do this by avoiding night calls and / or by limiting the frequency and duration of calls.

# Safety and care information

- Read these instructions carefully.
- Keep these instructions.
- Follow all these instructions.
- Heed the warnings.
- Clean only with a soft cloth (dry or slightly damp).
- Do not attempt to disassemble the device; it would no longer be covered by the warranty.
- Do not bring sharp objects directly into contact with the surface and do not spray any cleaning product directly onto the screen.
- Do not exert excessive pressure on the screen and do not put objects on it. This could damage the screen.
- Use the spare parts specified by the manufacturer.
- After any service or repair carried out on this product, ask the technician to perform a safety check.
- Use only the spare parts/accessories specified by the manufacturer.
- Refer to a qualified person for any repairs. Repair is required if the device is damaged in some manner or other, if the power cord or plug is damaged, if liquid has been spilled or objects have fallen on the device, or if the device has been exposed to rain or moisture, or has been dropped.
- Do not expose the device to direct sunlight or other source of extreme heat or cold.
- Respect the privacy of others when using your Telephone.
- Keep the device away from all metal objects (coins, keys, etc.).
- Do not leave near a magnetic field as this could cause data to be lost or could damage the device.
- Do not drop the device.
- Do not expose the device to shocks, friction or impact.
- In order to prevent data loss, remember to make a (computer or paper) back-up of information saved on the device.
- To prevent interference, do not use the device near other electronic devices, a pacemaker or medical equipment.
- Operating temperature: 0-40°C.
- This product is not a toy and requires adult supervision.

- Keep out of reach of the children and young children, this product may contain small parts, which represents a suffocation hazard.

***NOTE: In order to reduce any risk of fire or electric shock:***

- Do not expose this device to rain or moisture.
- Do not expose the product to water droplets or to splashes and do not place any object filled with liquid, such as a vase, on the device.
- Do not use the product near flammable or explosive materials.
- The power plug is used to disconnect the device and must always be easily accessible.
- In order to completely disconnect the device from the electricity supply, the power plug must be disconnected from the power outlet.
- Do not attempt to override the safety features of the polarised plug or the earth connection. A polarised plug has two pins, one of which is wider than the other. A plug with an earth connection has two flat pins and a third round pin for the earth connection. The widest pin and the third pin constitute the important safety features designed to protect you. If you cannot manage to fully insert the plug into the wall outlet, contact your electrician to replace the obsolete wall socket.
- Disconnect this device during electrical storms or when not in use for an extended period.
- Switch off the device in places presenting risk of explosion and when travelling by plane.
- Do not touch the power cord with wet hands and do not pull on the charger to disconnect it.
- The power cord must be placed so that it will not be stepped on or crushed particularly at the outlet, where it is plugged in or where it is connected to the device.
- Do not overload the power outlet. Use the power supply only as indicated.
- Do not install this device near heat sources such as electric hobs, cookers or others (including amplifiers).

# Epilepsy warning

Please read before using a video game or allowing your children to use one.
Some people are susceptible to epileptic seizures or loss of consciousness when exposed to certain flashing lights or light patterns in everyday life. Such people may have a seizure while watching television images or playing certain video games. This may happen even if the person has no medical history of epilepsy or has never had any epileptic seizures. If you or anyone in your family has ever had symptoms related to epilepsy (seizures or loss of consciousness) when exposed to flashing lights, consult your doctor prior to playing. We advise that parents should monitor the use of video games by their children. If you or your child has the following symptoms while playing a video game, discontinue use IMMEDIATELY and consult your doctor: dizziness, blurred vision, eye or muscle twitches, loss of consciousness, disorientation, any involuntary movement or convulsion.
Precautions to take during use of any video game:

- Do not sit too close to the screen. Sit a good distance away from the television screen, as far away as the length of the cable allows.
- Preferably play the game on a small television screen. Avoid playing if you are tired or have not had much sleep.
- Make sure that the room in which you are playing is well lit.
- Rest for ten to fifteen minutes per hour while playing a video game.

# Technical informations

| Technologies | Frequency range | Transmit power max |
|---|---|---|
| **2G** | GSM900 – DCS 1800 | GSM900: 1862.09mW PIRE (e.i.r.p) 32.70dBm<br>DCS1800: 1011.58mW PIRE (e.i.r.p) 30.05dBm |
| **3G** | WCDMA 900 – WCDMA 2100 | WCDMA900: 181.97mW PIRE (e.i.r.p) 22.60dBm<br>WCDMA2100: 202.3mW PIRE (e.i.r.p) 23.06dBm |
| **Bluetooth** | 2402MHz ~ 2480MHz | GFSK: 1.58mW PIRE (e.i.r.p) 2.0dBm<br>π/4 DQPSK: 1.50 mW PIRE (e.i.r.p) 1.76dBm<br>8DQPSK: 1.53mW PIRE (e.i.r.p) 1.84dBm |
| **Wifi 2.4 Ghz** | 2412MHz ~ 2472MHz | 802.11b: 28.97mW PIRE (e.i.r.p) 14.62dBm<br>802.11g: 23.23mW PIRE (e.i.r.p) 13.66dBm<br>802.11n20: 14.59mW PIRE (e.i.r.p) 11.64dBm |

# Information of charger

| | |
|---|---|
| Manufacturer's name and address | SHENZHEN TIANYIN ELECTRONICS CO., LTD; 2-6 FL, BLDG 9, SANZHULI INDUSTRIAL PARK, SHUITIAN COMMUNITY, SHIYAN SUBDISTRICT, BAO'AN DISTRICT, SHENZHEN, GUANGDONG, 518108, CHINA |
| Model identifier | TPA-97050070V01 |
| Input voltage | 100-240V |
| Input AC frequency | 50-60Hz |
| Output voltage | 5.0 V |
| Output current | 0.7 A |
| Output power | 3.5 W |
| Average active efficiency | 72.9% |
| No-load power consumption | 0.08 W |

# Recycling

The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The Waste Electrical and Electronic Equipment (WEEE) Directive (2012/19/EU) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

***Product disposal instructions for residential users:***

If you no longer use the device, remove and dispose of the battery, as well as the device, in compliance with the local recycling procedures. For more information please contact your local authority or the retailer where the product was purchased.

***Product disposal instructions for business users:***

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

# Signages

Conformity to European directives (CE)

Conformity to Waste Electrical and Electronic Equipment (WEEE ou W3E) Directive 2012/19/EU product recycling guideline. Indicates that the device should not be thrown in the trash and must be recycled according to local laws.

Product compliant with the IEC 60417– 5957; indoors use only.

Adaptator with double insulation electrical protection which does not require a security ground connection.

# Simplified EU declaration of conformity

Hereby, LOGICOM SA – 55 rue de Lisbonne – 75008 PARIS, declare that the radio equipment type telephone GPS/WIFI/BT/GSM/3G model Le Kay 283 is in compliance with Directive 2014/53/UE.
The full text of the EU declaration of conformity is available at the following internet address:

**https://www.logicom-europe.com/ce-doc**

V03WL

# The warranty scope of application

If you encounter any problems:
A contact form and complete FAQ are available on our website:

**www.logicom-europe.com**

If none of these platforms does solve your problem, contact your retailer.
The LOGICOM supplier warranty is valid for normal use of the device as defined in the instructions.
This warranty excludes damage caused by external circumstances.
Specifically, the warranty does not apply if the device is damaged as a result of a bump or drop, an operating error, a connection that does not comply with these instructions, lightning, a surge, or inadequate protection against heat, humidity, or freezing temperatures.
The warranty is applicable only in metropolitan France.

- The warranty does not cover user manuals or applications, settings, content or data of any kind.
- The warranty does not cover normal usury of the product. (Screens, batteries and camera)

• The warranty does not cover damage to the product due to misuse, including in particular those caused by objects, a pressure drop.
• The warranty does not cover any use of the label with the precautions outlined in the manual.
• The warranty does not cover defects caused to the product with another product connected or used with an accessory or software not provided by British Telecom.
• The warranty does not cover any damage to the battery.
• The warranty does not cover the product or its accessories if it has been disassembled or modified in any way.
• The warranty does not cover any unidentifiable product by serial number or (s) number (s) IMEI. If its elements have been removed, altered or defaced, the warranty does not apply.
• The warranty does not cover damage done to the product caused by exposure to moisture, conditions that extreme heat or cold, corrosion, oxidation, with any liquid whatsoever.
• The warranty does not cover any damage to (s) player (s) or SIM MicroSD reader.

The legal warranty for hidden defects applies in compliance with Articles 1641 et seq. of the French Civil Code.

Made in PRC
© 2020 Logicom SA.